2060 D

Dunstabzugshaube
Hotte aspirante
Cappa aspirante
Cooker hood

Montage- und Gebrauchsanweisung
Notice d’utilisation et d’installation
Istruzioni di montaggio e uso
Operating and Installation Instructions

Contents

Safety warnings **52**
for user 52
for kitchen unit installer 52

Introduction **54**
Extractor version 54
Filter Version 54

Hood Operation **55**
Filter checking device for the detection of grease and active carbon 56
Led – Indicator for grease filter C 56
Led - indicator for active carbon filter D 56
Resetting the saturation indicator 56

Maintenance and care **57**
Metal grease filter 57
Open the metal grease filter 57
Carbon filter 58
Changing the light bulb 59

Cleaning **60**

Special accessories **60**

Technical assistance service **60**

Technic Details **63**
Mounting accessories included 63

Electrical connection **64**
Safety warnings for the electrician 64
Wall unit mounting 65

Printed on recycled paper
AEG - putting words into action

Safety warnings

for user

- Always cover lighted elements, to prevent excess heat from damaging the appliance. In the case of oil, gas and coal fired cookers it is essential to avoid open flames.
- Also, when frying, keep the deep frying pan on the cooker top/ cooker under careful control.
- The hot oil in the frying pan might ignite due to overheating.
- The risk of self-ignition increases when the oil being used is dirty.
- It is extremely important to note that overheating can cause a fire.
- **Never carry out any flambé cooking under the hood.**
- **Always disconnect the unit from the power supply before carrying out any work on the hood, including replacing the light bulb** (take the cartridge fuse out of the fuse holder or switch off the automatic circuit breaker).
- **It is very important to clean the hood and replace the filter at the recommended intervals. Failure to do so could cause grease deposits to build up, causing a fire hazard.**

for kitchen unit installer

- When used as an extractor unit, the hood must be fitted with a 150mm diameter hose.
- Should there already be a pipe of diameter 125 mm that ducts to the outside through the walls or roof, it is possible to use the 150/ 125 mm reduction flange provided. In this case the hood will be slightly more noisy.
- **When installing the hood, make sure you respect the following minimum distance from the top edge of the cooking hob/ring surfaces:**

electric cookers	**600 mm**
gas cookers	**650 mm**
coal and oil cookers	**700 mm min.**

- The national decree on fuel-burning systems specifies a maximum depression of 0.04 bar in such rooms.
- The air outlet must not be connected to chimney flues or combustion gas ducts. The air outlet must under no circumstances be connected to ventilation ducts for rooms in which fuel-burning appliances are installed.

- It is advisable to apply for authorization from the relevant controlling authority when connecting the outlet to an unused chimney flue or combustion gas duct.
  The air outlet installation must comply with the regulations laid down by the relevant authorities.
- When the unit is used in its extractor version, a sufficiently large ventilation hole must be provided, with dimensions that are approximately the same as the outlet hole.
- National and regional building regulations impose a number of restrictions on using hoods and fuel-burning appliances connected to a chimney, such as coal or oil room-heaters and gas fires, in the same room.
- Hoods can only be used safely with appliances connected to a chimney if the room and/or flat (air/environment combination) is ventilated from outside using a suitable ventilation hole approximately 500-600 cm^2 large to avoid the possibility of a depression being created during operation of the hood.
- If you have any doubts, contact the relevant controlling authority or building inspector's office.
- Since the rule for rooms with fuel burning appliances is "outlet hole of the same size as the ventilation hole", a hole of 500-600 cm^2, which is to say a larger hole, could reduce the performance of the extractor hood.
- If the hood is used in its filtering function, it will operate simply and safely in the above conditions without the need for any of the aforementioned measures.
- When the hood is used in its extractor function, the following rules must be followed to obtain optimal operation:
  — short and straight outlet hose
  — keep bends in outlet hose to a minimum
  — never install the hoses with an acute angle, they must always follow a gentle curve only
  — keep the hose as large as possible (preferably the same diameter as the outlet hole).
- Failure to observe these basic rules will drastically reduce the performance and increase the noise levels of the extractor hood.

Introduction

Extractor version

- The hood is supplied as an extractor unit and can also be used with a filtering function by fitting one activated carbon filter (special accessory).
- You will need original AEG carbon filter for this function (see Special Accessories).
- The air is discharged to the outside through a pipe, which must be fitted to connection flange **A**. **Fig. 1**.
- In order to obtain the best performance the hose should have a diameter equal to the outlet hole.
  Should there already be a pipe of diameter 125 mm that ducts to the outside through the walls or roof, it is possible to use the 150/125 mm reduction flange provided. In this case the hood will be slightly more noisy.

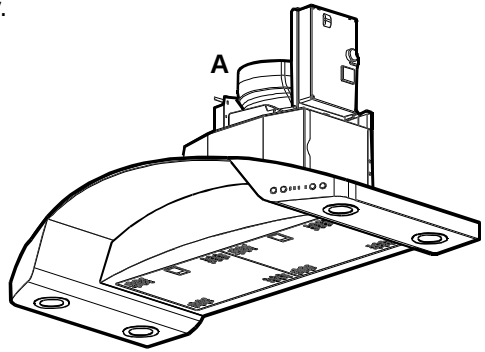

Fig. 1

Filter Version

- The air is filtered through an activated charcoal filter and returned to the kitchen through the top grill of the outlet pipe.
- You will need an original AEG KF8 activated carbon filter for the filtering function. (See Special Accessories).
- Fix the deflector using 2 screws Ø 2,9 x 13 mm. **Fig. 2.**
- Optionally, the position of the chimney elements can be changed. When using the hood in the filter version the chimney must be fixed at the top, with the air outlet grill at the side.

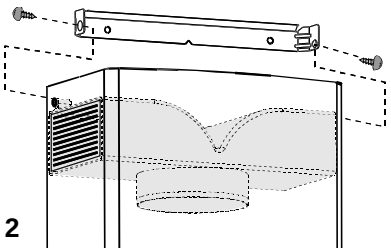

Fig. 2

Hood Operation

- The hood is fitted with one motor having several speed. Turn the hood on a few minutes before you start cooking then you will get an underpressure in the kitchen. It should be left on after cooking for about 15 minutes or until all odours have disappeared. The control switches are located on the unit's front panel:

A - Main switch, hood on/off.
B - Start and choice of motor speed 1-2-3-1-2.....
C - Indicates speed 1 (LED) and indication of the grease saturation for the filter (flashing indicator).
D - Indicates speed 2 (LED) and indication of the active carbon saturation for the filter (flashing indicator).
E - Indicates speed 3
F - Indicates Intensive speed (LED).
G - Intensive speed on/off. The Intensive speed runs for 5 minutes:
If the hood is on when the Intensive speed is activated, the hood revert to previous speed after 5 minutes.
If the hood is off when the Intensive speed is activated, the hood will automaticly be turned off after 5 minutes.
To interrupt the Intensive speed, press button A or B.
H - Light ON/OFF

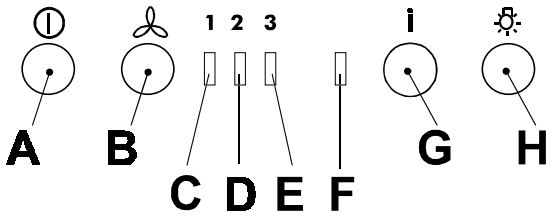

Should the hood or the controls fail to operate: disconnect the power supply for at least 5 seconds, then turn the hood back on again.

Filter checking device for the detection of grease and active carbon

This type of vapour hood is predisposed with a device that signals when the grease or active carbon filter requires cleaning (sold with the active carbon filter by the manufacturer specialized in ventilation equipment).
This type of vapour hood is supplied by the manufacturer without the active carbon filter, therefore the saturation signal is disabled.
The hood is purchased with active carbon filter included, and the saturation signal is activated as follows:
Depress and hold the A and B buttons simultaneously for 3 seconds. Initially only the LED indicator signal for the grease filter C is activated, shortly after the LED indicator for the active carbon filter D will activate, at this point the saturation detection has been enabled.
To switch off the saturation detection : depress and hold the A and B buttons for 3 seconds until the LED indicator for the active carbon filter is flashing.

Led – Indicator for grease filter C

The LED indicator for the grease filter will flash when it requires cleaning.
Follow the maintenance instructions.

Led - indicator for active carbon filter D

The LED indicator for the active carbon filter illuminates when the filter requires replacing.
This occurs after about 160 working hours from when the active carbon filter was first put into operation.

Resetting the saturation indicator

After cleaning the filter depress and hold the G and H buttons again for 3 seconds until the LED – grease filter indicator or the LED – active carbon indicator D are no longer flashing.

Maintenance and care

- **The hood must always be disconnected from the mains power supply before beginning any maintenance work.**

Metal grease filter

- The purpose of the grease filters is to aspirate grease particles which form during cooking and it **must** always be used, either in the external evacuation or internal recycling function.
  Attention: the metal grease filters must be removed and washed, either by hand or in the dishwasher, every four weeks.

Open the metal grease filter

- Pull the spring-lock and extract the grease filter. **Fig. 3**.

Hand washing

Soak grease filters for about one hour in hot water with a grease-loosening cleaner, then rinse off thoroughly with hot water. Repeat the process if necessary. Refit the grease filters when it are dry.

Dishwasher machine

Place grease filters in dish washer. Select most powerful washing programme and highest temperature, at least 65°C. Repeat the process. Refit the grease filters when it are dry. When washing the metal grease filter in the dishwasher a slight discoloration of the filter can occur, this does not have any impact on its performance.

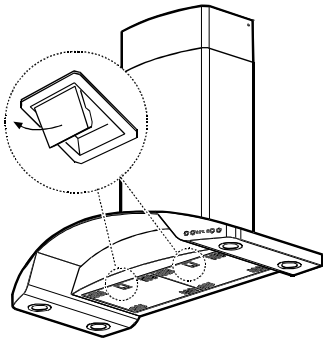

Fig. 3

- **Clean the inner housing using a hot detergent solution only (never use caustic detergents, abrasive powders or brushes).**

Carbon filter

- The carbon filter should only be used if you want to use the hood in its filtering function.
- To do this you will need an original AEG activated carbon filter (see special accessories).
- **Cleaning/replacing the carbon filter**
  Unlike other carbon filters, the LONGLIFE carbon filter can be cleaned and reactivated. At normal use the filter should be cleaned every second month. The best way to clean the filter is in the dishwasher. Use normal detergent and choose the highest temperature (65º C). Wash the filter separately so that no food parts gets stuck on the filter and later causes bad odours. To reactivate the carbon, the filter should be dried in an oven for 10 minutes with a temperature of maximum 100º C.
  After approximately three years of use, the carbon filter should be replaced with a new, as the odour reduction capacity will be reduced.
- **Mounting**
  Fit the carbon filter first rearward on the long supporting tongue, then rotate it to close the motor housing and fix it using its two red keys A. **Fig. 4**.
- **To dismount** proceed in reverse order.
- Always specify the hood model code number and serial number when ordering replacement filters. This information is shown on the registration plate located on the inside of the unit.
- The activated carbon filter can be ordered from the AEG technical assistance service.

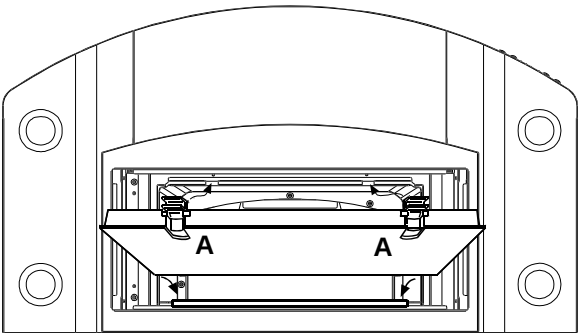

Fig. 4

Warning

- Failure to observe the instructions on cleaning the unit and changing the filters will cause a fire hazard. You are therefore strongly recommended to follow these instructions.
- The manufacturer declines all responsibility for any damage to the motor or any fire damage linked to inappropriate maintenance or failure to observe the above safety recommendations.

Changing the light bulb

- Disconnect the cooker hood from the main supply.
- Remove the lamp cover, use a screw driver as a lever. **Fig. 5.**
- Replace the old bulb with a new one of the same type.
- Remount the lamp cover.
- If the light does not come on, make sure the bulb has been inserted in correctly before contacting the technical assistance service.

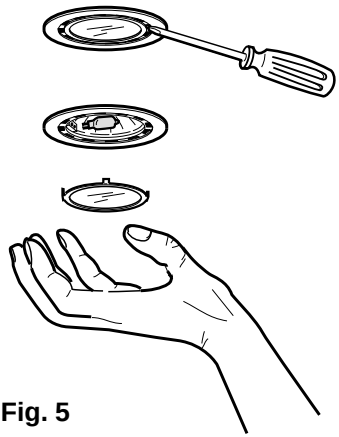

Fig. 5

Cleaning

- Warning: always disconnect the hood from the mains power supply before cleaning it.
  Never insert pointed objects in the motor's protective grid.
- Wash the outside surfaces using a delicate detergent solution.
  Never use caustic detergents or abrasive brushes or powders.
- Only ever clean the switch panel and filter grille using a damp cloth and delicate detergents.
- It is extremely important to clean the unit and change the filters at the recommended intervals. Failure to do so will cause grease deposits to build up that could constitute a fire hazard.

Special accessories

Carbon filter KF 8 E-Nr. 942 118 648

Technical assistance service

You are welcome to telephone our technical assistance service (see list of technical assistance centres) whenever you need information or in the unlikely event of a fault.
When calling, please be ready to specify:

1. **The model code number**
2. **The serial number (E-Nr.)**
3. **The manufacturing number (F-Nr.)**

This information is shown on the registration plate inside the unit behind the grease filter.

We reserve the right to change specifications and colours as a result of our policy of continuing technological development.

Guarantee conditions

Guarantee Conditions

AEG offer the following guarantee to the first purchaser of this appliance.

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.The guarantee does not cover commercial use.
2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty materials. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.This guarantee does not cover such parts as light bulbs, removable glass-ware or plastic.
3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (manufacturer`s service or authorised agent). AEG reserves the right to stipulate the place of the repair (i.e.the customer`s home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. Parts removed during guarantee repairs become the property of AEG.
6. The purchaser`s statutory rights are not affected by this guarantee.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products.
- This guarantee relates to you an cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home.They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 44 62 29 29
Germany	Nürnberg	+49 (0) 911 323 2600
Italy	Pordenone	+39 (0) 1678 47053
Sweden	Stockholm	+46 (0) 8 738 7910
UK	Slough	+44 (0) 1753 219899

Technic Details

Dimensions - extractor ver (in cm):	
Height x Width x Depht	81-126.5 x 89,8 x 51
Dimensions - filter version (in cm):	
Height x Width x Depht	81-136 x 89,8 x 51
Maximum absorbed power:	**215 W**
Motor absorption:	1 x 130 W
Lighting:	4 x 20W
Lenght of the cable**:**	150 cm

Mounting accessories included

2 hooks
1 chimney support
6 wall plugs Ø 8 mm
6 wood-screws 5 x 45 mm
2 metal screws 2,9 x 13
4 metal screws 3 x 9
1 deflector
1 reduction flange 150/125 mm

Electrical connection

Safety warnings for the electrician

Before connecting the appliance to the power supply, check that the voltage indicated on the rating plate corresponds to the mains power supply available. Appliances fitted with a plug can be connected to any standard power socket within easy access.
Should it be necessary to provide a fixed connection, the hood must only be installed by an electrician authorised by the local electricity board. When installing, an omnipolar disconnector with a distance of at least 3 mm between contacts must be provided.
This disconnector may be for example a switch, fuses (plug fuses must be removed from the fuse box, fault current switches and remote switches with a distance of over 3 mm between contacts.
The manufacture declines all responsibility for malfunctions resulting from failure to comply with the above instructions.

If the power socket is applied directly above the hood this gives two advantages:

1. the socket is not visible.

2. the appliance can be disconnected at need merely be removing the plug.

Electrical connection
220-240 V – by means of fixed power cable with plug.
(Fixed connection of the appliance must only be carried out by an authorised electrician.)

Wall unit mounting - Fig. 6

- Position the template **(1)** on the wall and mark the position, and drill **(2)** the holes (2 x Ø 8 mm).
- Mount the two rawl plugs with the hooks **(3)**.
- Hang the hood on the hooks and level it with the adjustment screws **(4)**.
- Remove the grease filters **(5)** and mark for the two screws **(6)**. Remove the hood and drill the holes (2 x Ø 8 mm).
- Insert the rawl plugs **(7)** and hang the hood on the wall again. Adjust it horizontally with the screws **(8)** and secure it with the screws **(9)**.
- Mount the chimney holder **(10)** with the rawl plugs **(9)** and the screws **(11)**.
  Be careful that it is centered over the hood and horizontally aligned.
- **Fitting for extractor version (S):** Connect a tube between the hood air outlet and the wall or roof exhaust channel. **Note** that the top part of the chimney can be mounted with the side grids up or down. For use as an extractor version hood it must be mounted with the grids downwards.
  Fitting for filter version (K): Mount the deflector **(12)** with the two screws **(13** - 2,9 x 13**)** supplied.
- Make electrical connection **(14)** (see paragraph “Electrical connection”)
- Place the chimney **(15)** and fix it to the top chimney holder with the two screws **(16** - 3 x 9**)** supplied.
  Lower the bottom part of the chimney and fasten it to the top of the hood with two screws **(17** - 3 x 9**)**, supplied.

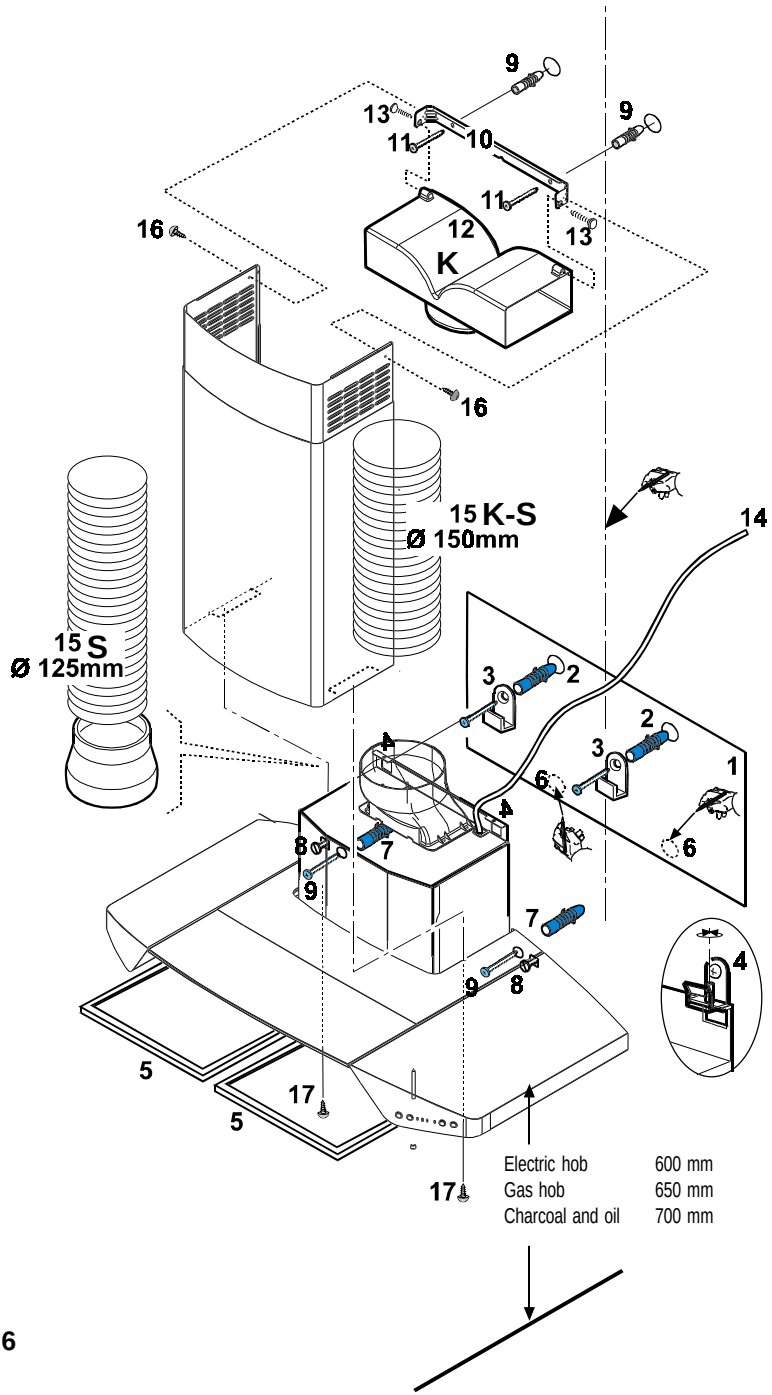
9
13
11
10
9
11
12
K
13
16
16
15 K-S
Ø 150mm
14
15 S
Ø 125mm
3
2
2
3
1
4
6
6
4
8
7
9
7
9
8
4
5
17
5
17
Electric hob 600 mm
Gas hob 650 mm
Charcoal and oil 700 mm

Fig. 6

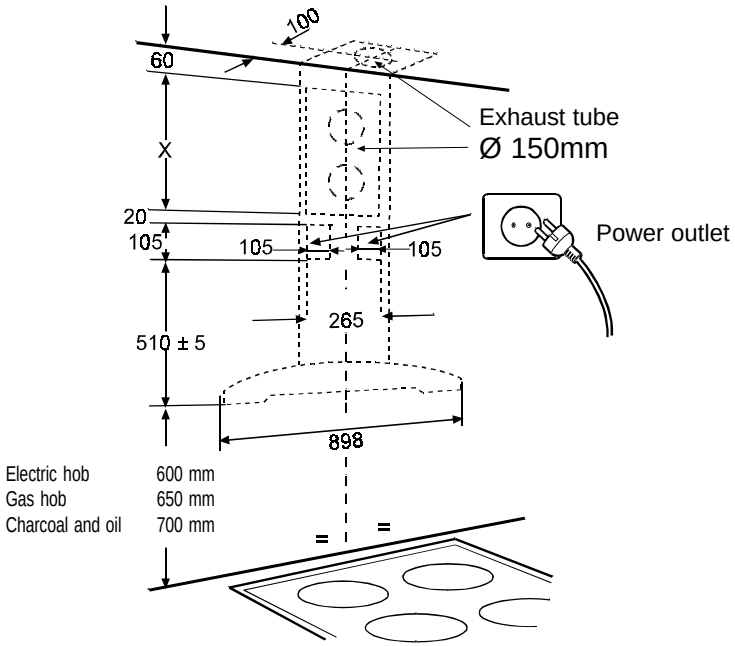
100
60
X
Exhaust tube
Ø 150mm
20
105
105
105
Power outlet
265
510 ± 5
898
Electric hob 600 mm
Gas hob 650 mm
Charcoal and oil 700 mm

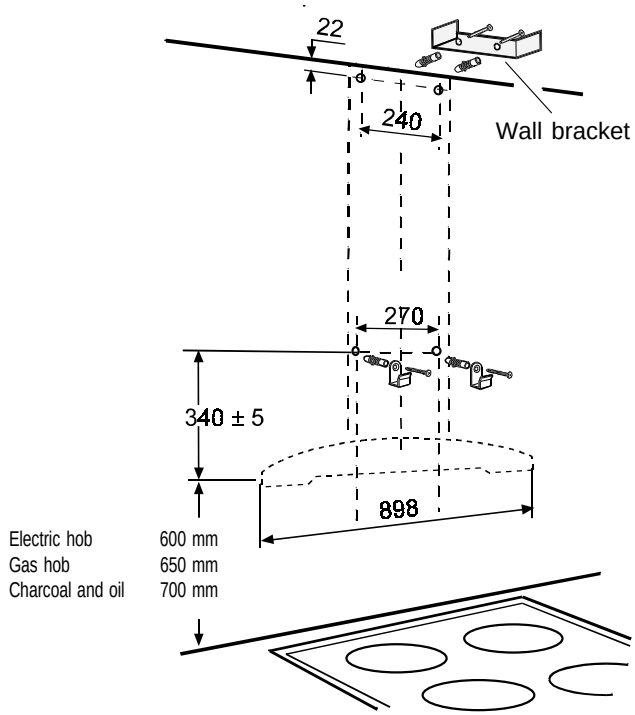
22
240
Wall bracket
270
340 ± 5
898
Electric hob 600 mm
Gas hob 650 mm
Charcoal and oil 700 mm

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

http://www.aeg.hausgeraete.de

© Copyright by AEG

LI1VLA Ed. 01/02